

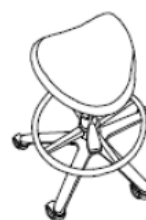
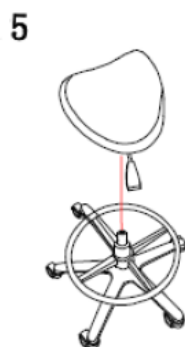
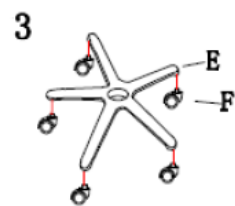


475005

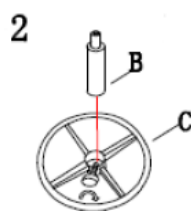

	1
	1
	1
	1
	1
	5
	4
	4

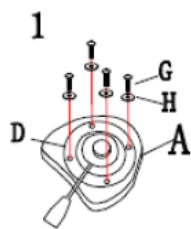

(CZ) Před nasazením pístu je nutné z něj sundat plastovou objímku!

(SK) Pred nasadením piestu je potrebné z neho odstrániť plastovú objímku!

(PL) Przed założeniem tłoka trzeba z niego zdjąć plastikową obejmę!

(DE) Vor dem Einsetzen des Kolbens muss die Kunststoffklemme entfernt werden!